

Bouclair

ASSEMBLY INSTRUCTIONS

WALL SCONCE

SKU9402609

IMPORTANT

- We suggest you read this leaflet carefully and entirely before beginning the assembly and installation of this lighting fixture.
- Carefully check that you have all parts before beginning assembly.
- Keep fittings out of children's reach and keep children well away from the assembly area.
- This portable luminaire has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use an extension cord unless the plug can be fully inserted. Do not alter the plug.
- This fixture has been rated for up to one 60-watt maximum TYPE A light bulb (not included) or one 13-watt compact fluorescent light bulb (not included) or one 9-watt SBLED light bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.
- This lighting fixture is meant for indoor use.

WARNING

- To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug the light fixture and allow it to cool before replacing the light bulb.
- Do not touch the bulb when the fixture is turned on. Do not look directly at the lit bulb.
- Keep flammable materials away from the lit bulb.

TOOLS REQUIRED (not included)

Cross Screwdriver, Hammer, Electric hand drill.

PARTS LIST

(A) Lamp Holder (1pc)

(B) Canopy Screws (2pcs)

(C) Mounting Plate (1pc)

(D) Mounting Screws (2pcs)

(E) Plastic Nail (2pcs)

(F) Canopy (1pc)

(G) Power Cord with Plug (1pc)

(H) Rattan Shade (1pc)

(I) Socket Ring (1pc)

Bouclair

PRE-ASSEMBLY



- Before starting the installation, shut off the power supply at the electrical panel by switching off the circuit breaker or removing the appropriate fuse. Cutting the power at the light switch is not sufficient to prevent electrical shock.
- Remove all parts and hardware from the box along with any plastic protective packaging.
- Do not discard any contents until after assembly is complete to avoid accidentally tossing small parts or hardware.



TO ASSEMBLE

1. Separate the Mounting Plate (C) from Canopy (F) by unscrewing the Canopy Screws (B). Please see Fig.A1.
2. Position the Mounting Plate(C) on the wall and mark the desired locations for the Plastic Nail (E). Drill two pilot holes at the marked areas on the wall. Knock the Plastic Nail(E) into the drilled holes, then attach the Mounting Plate (C) to the Plastic Nail(E) by screwing the two Mounting Screws(D). Tighten each screw clockwise until the Mounting Plate (C) is firmly secured to the wall. Please see Fig.A2.
3. Position the Canopy (F) over the Mounting Plate (C), aligning the two screw holes on the Canopy (F) with the two holes on the Mounting Plate (C). Insert the two Canopy Screws(B) and tighten them to secure the Canopy (F) in place. Please see Fig.A3.
4. Unscrew the Socket Ring(I) from Lamp Holder(A). Attach the Rattan Shade(H) onto the Lamp Holder (A), then secure the Rattan Shade(H) by tightening the Socket Ring(I). Please see Fig.A4.
5. Screw the specified light bulb into the socket. Please see Fig.A5.

LAMP CARE INSTRUCTIONS

- Wipe with a clean, soft, dry cloth or static duster.
- Always avoid the use of harsh chemicals or abrasive cleaners as they may cause damage to the fixture's finish.

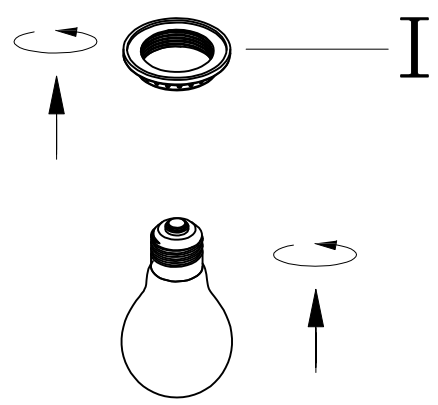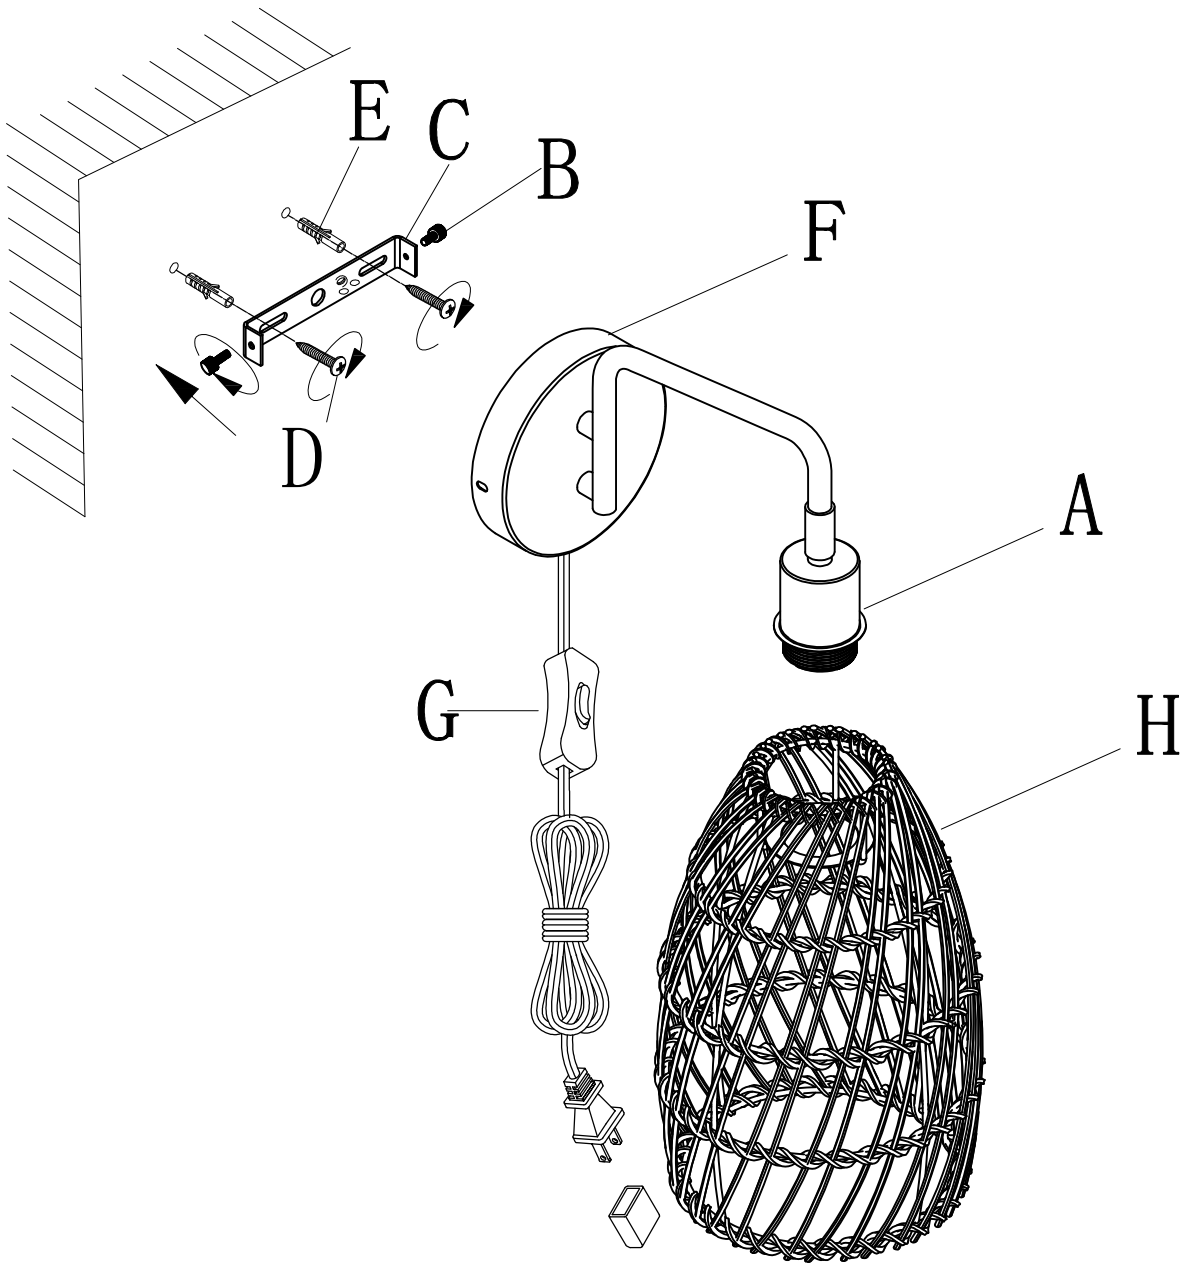
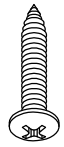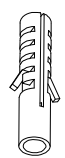
<p>D</p>  <p>2x</p>	<p>E</p>  <p>2x</p>
---	---

